- 1. Flexible gasoline tank ventilation hose within an engine space, shall be:
 - a. Type A1-15
 - b. Type A1, A2, A1-15
 - c. Type B2
 - d. Type B1-15
- 2. A rigid metal distribution line must be secured within _____ of a connection with a flexible fuel hose.
 - a. 4-inches
 - b. 7-inches
 - c. 12-inches
 - d. 18-inches
- 3. An aluminum gasoline fuel tank must be at least ____ thick.
 - a. .45 in.
 - b. .050 in.
 - c. .084 in.
 - d. .090 in.
- 4. Fuel fills shall be located and orientated so no fuel can enter the boat when it is in its static floating position and fuel overflows at a rate of _____ per minute for _____.
 - a. 9 gallons; 5 seconds
 - b. 7 gallons; 5 seconds
 - c. 5 gallons; 5 seconds
 - d. 3 gallons; 5 seconds
- 5. The duration for pressure testing a 65-gallon gasoline tank is:
 - a. 5 minutes
 - b. 6 minutes
 - c. 7 minutes
 - d. 8 minutes
- 6. Open to the atmosphere is defined as:
 - a. One side of the compartment is open to the exterior of the vessel
 - b. There is at least 24 square inches of open area directly exposed to the exterior
 - c. There is at least 15 square inches of net open area directly exposed to the atmosphere, for each cubic foot of net compartment volume.
 - d. None of the above

- 7. At what minimum pressure shall a gasoline system be tested for the fuel system pressure test?
 - a. 1-1/2 times the maximum hydrostatic head possible during service
 - b. 1-1/2 times the maximum hydrostatic head at the designed tank fill level, plus the system relief pressure
 - c. 3psi
 - d. The greater of A, B, or C
- 8. The gasoline fuel tank fittings must be readily accessible, without the use of hand tools.
 - a. True
 - b. False
- 9. The fuel fill cap shall be provided with a(n) _____ indication it has been properly sealed when closed.
 - a. Physical
 - b. Audible
 - c. Visual
 - d. Any of the above
- 10. All non-integral tank supports, chocks, or hangers, shall be separated from ______ tank surfaces by a non-metallic, non-moisture absorbent and non-abrasive material that is permanently bonded to the tank.
 - a. Metallic
 - b. Plastic
 - c. Composite
 - d. All of the above
- 11. Fuel fill hose clamps shall:
 - a. Be reusable
 - b. At least 5/16" band width per Table 3
 - c. Shall have a resistance to corrosion less than 300 series stainless steel
 - d. All of the above
- 12. The EPA evaporative emissions requirement allows fuel hose clamps, which depend solely on the spring tension to secure the hose fittings.
 - a. True
 - b. False

- 13. A leaking fuel system warning label shall be placed:
 - a. Installed near the fuel fill
 - b. Installed at a point of frequent servicing
 - c. Installed at the helm in plain sight of the operator
 - d. All of the above
- 14. There should be at least _____ of separation between the external fuel tank vent opening and any compartment ventilation opening.
 - a. 7 inches
 - b. 15 inches
 - c. 40 inches
 - d. 72 inches
- 15. Which of the following would not be acceptable for anti-siphon protection?
 - a. Securing the fuel supply line above the top of the tank to the engine
 - b. Installing an electrically operated valve at the tank withdrawal fitting
 - c. Installing a fuel flow meter at the tank inlet fitting
 - d. Installing an anti-siphon device at the tank withdrawal fitting
- 16. Gaskets and seals used in gasoline fuel systems shall:
 - a. Be made of cork
 - b. Form a complete ring
 - c. Be Split
 - d. All of the above
- 17. Each metallic fuel tank and metal or metallic plated component of the fuel fill system, which is in contact with the fuel:
 - a. shall be segregated from fuel
 - b. shall be EPA certified
 - c. shall be grounded
 - d. none of the above
- 18. The manufacturer must install the fuel tank so it can be maintained and replaced if needed.
 - a. True
 - b. False
- 19. A flexible fuel hose section, less than 12-inches in length, is not required to contain hose markings if a tag is attached displaying the required information.
 - a. True
 - b. False

- 20. The fuel tank label shall be installed so it is:
 - a. accessible
 - b. readily accessible
 - c. permanently installed and displayed in the owner's manual
 - d. readable from the installed tank position